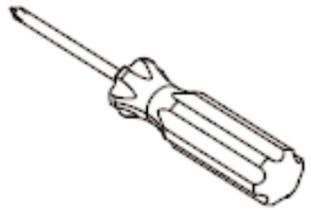
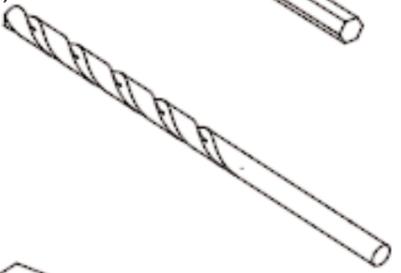
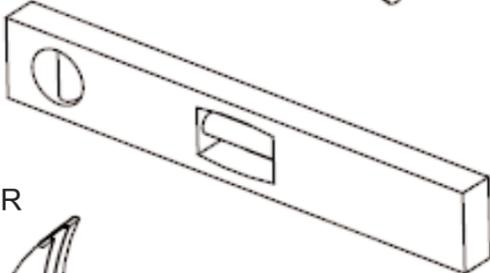
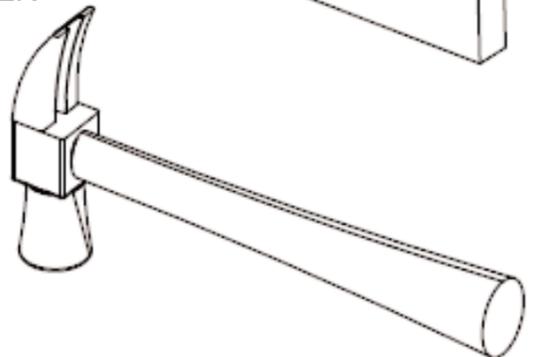
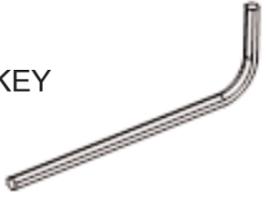
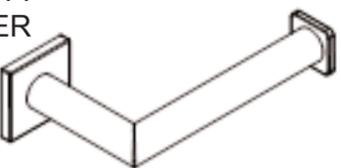


ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR	 X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR	 X 2	PEN / PENCIL	
#8 SCREW	 X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET	 X 1	LEVEL SET	
M6X1 SET SCREW	 X 1	HAMMER	
3MM HEX KEY	 X 1		
OPEN TT HOLDER	 X 1		

DYAD

INSTALLATION INSTRUCTIONS


5306

OPEN TISSUE HOLDER




2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

① REMOVE MOUNTING BRACKET

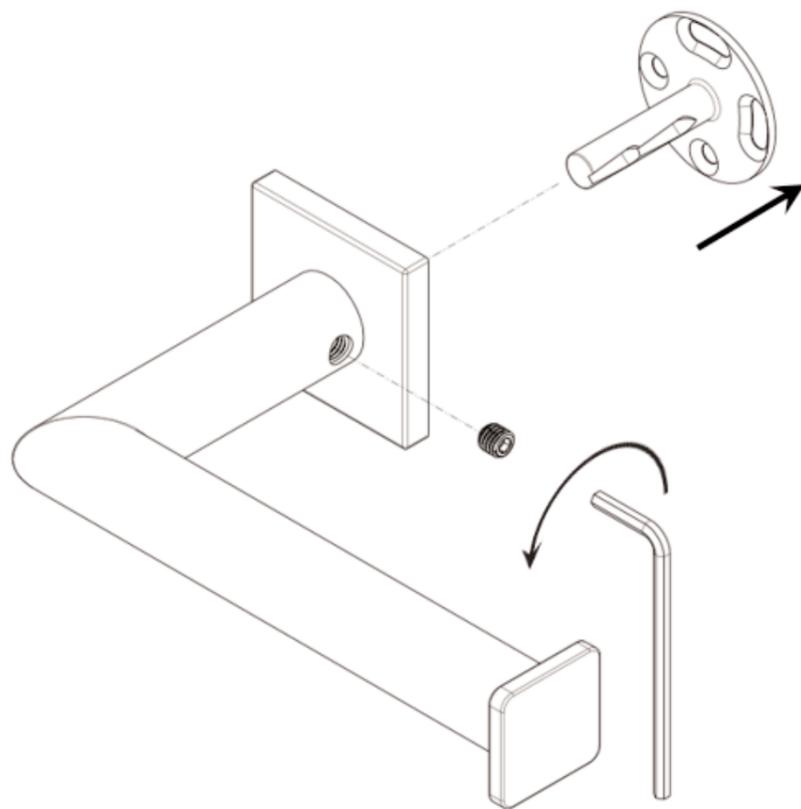


② ALIGN MOUNTING BRACKET AND MARK LOCATION

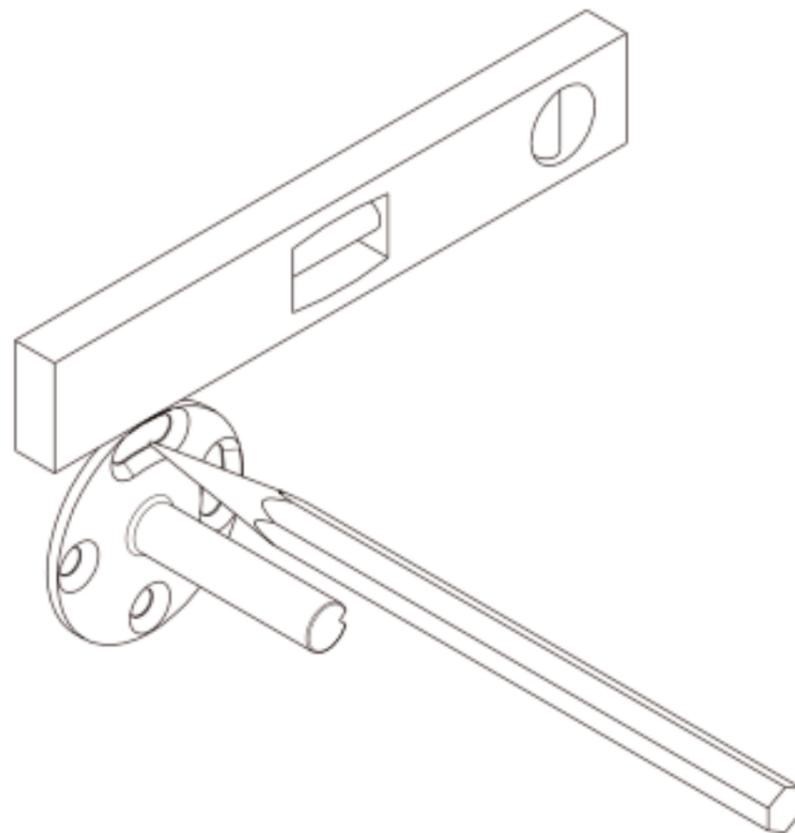

③ DRY WALL INSTALLATION

DO NOT DRILL

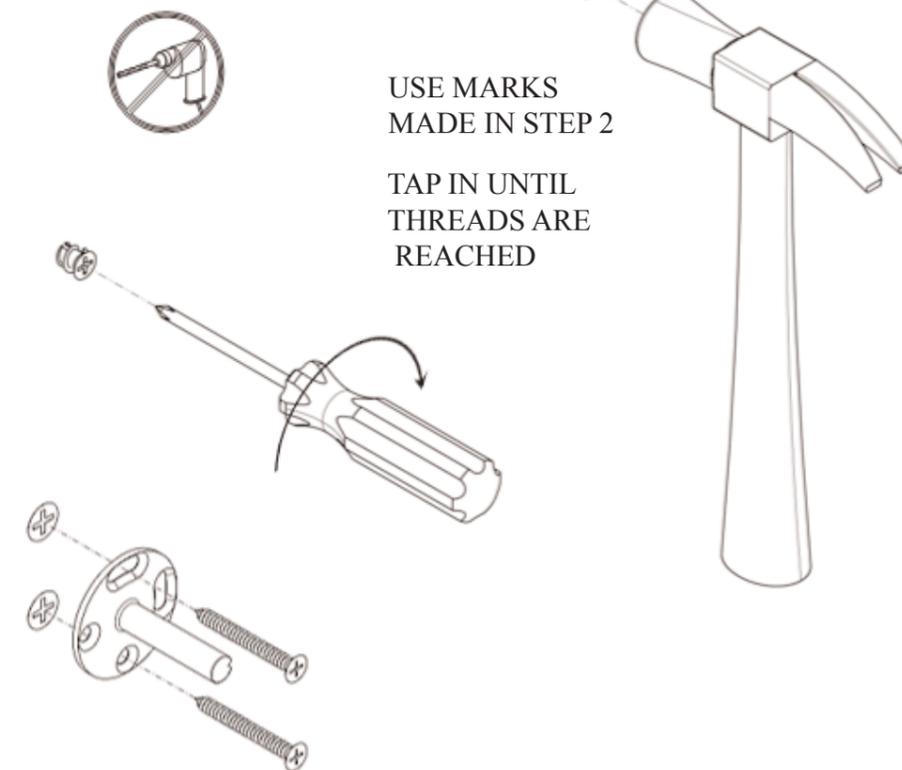

USE MARKS
MADE IN STEP 2


TAP IN UNTIL
THREADS ARE
REACHED

④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

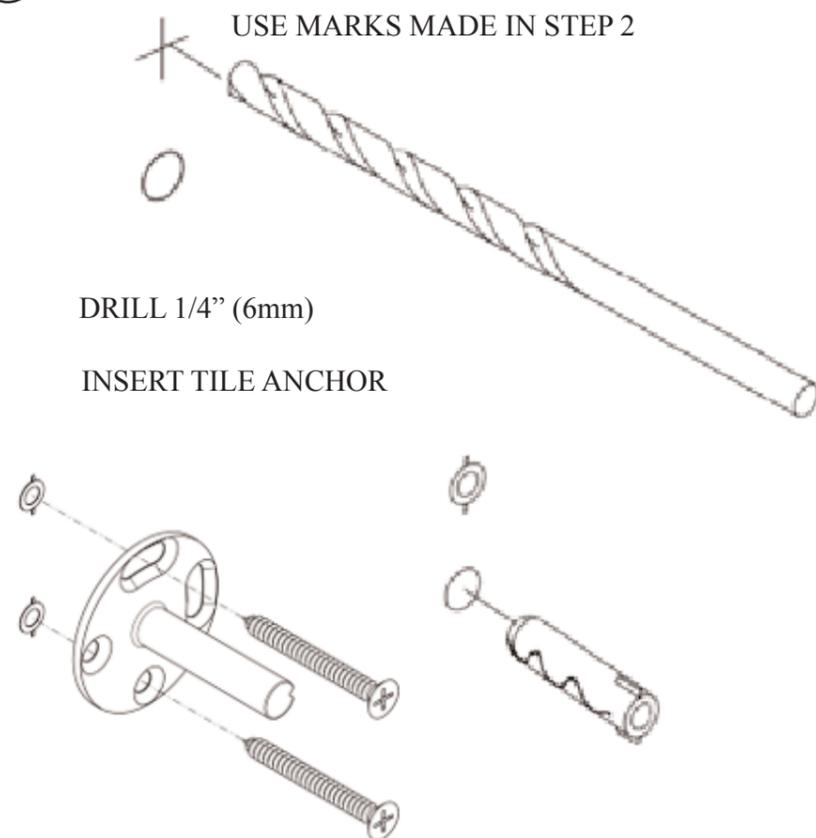

⑤ INSTALL PRODUCT ONTO BRACKET

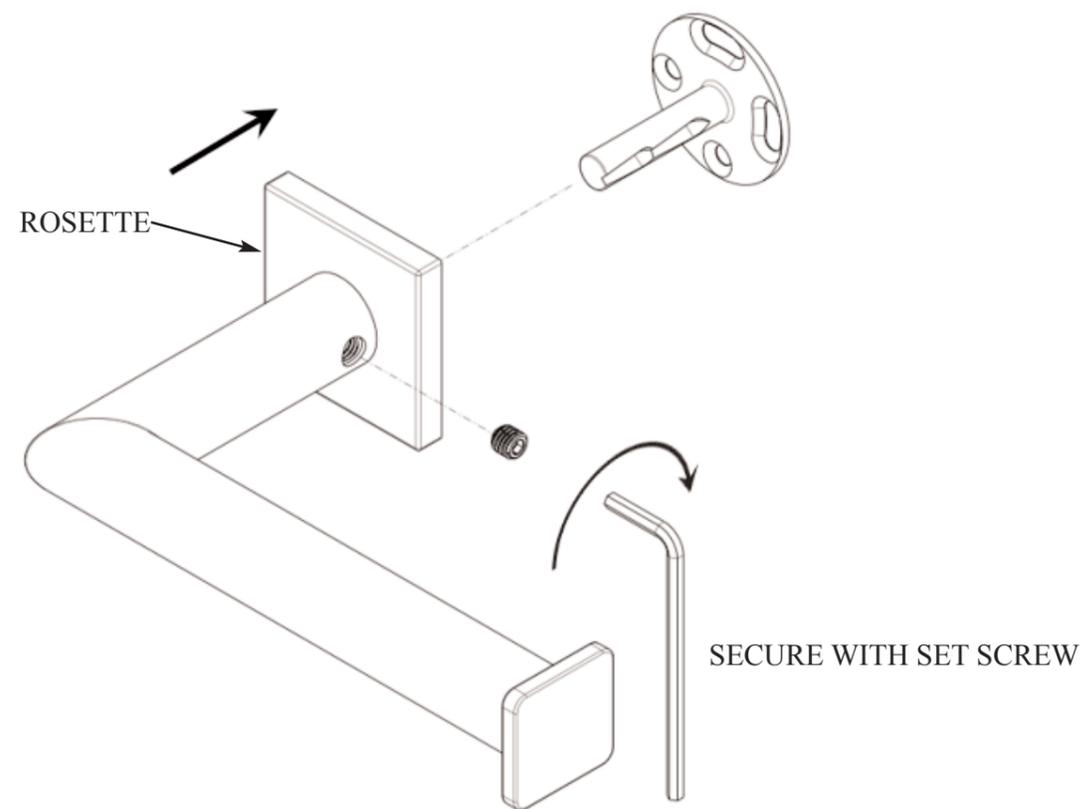

SECURE WITH SET SCREW