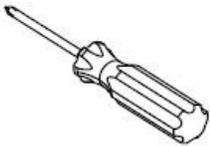
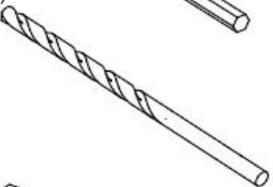
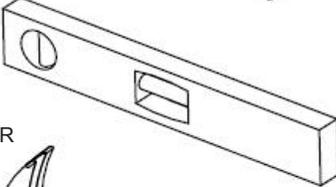
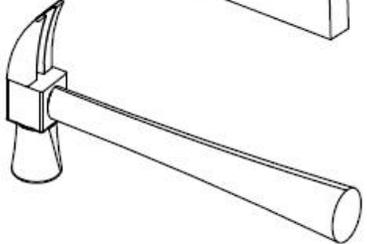
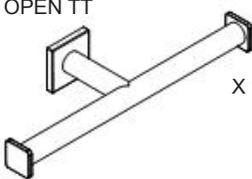


ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR	 X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR	 X 2	PEN / PENCIL	
#8 SCREW	 X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET	 X 1	LEVEL SET	
M6X1 SET SCREW	 X 1	HAMMER	
3MM HEX KEY	 X 1		
DOUBLE OPEN TT HOLDER	 X 1		

GNG - 5309
EN-2927

DYAD

INSTALLATION INSTRUCTIONS

5309

DOUBLE OPEN TISSUE HOLDER


GINGER

Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

REV -

① REMOVE MOUNTING BRACKET

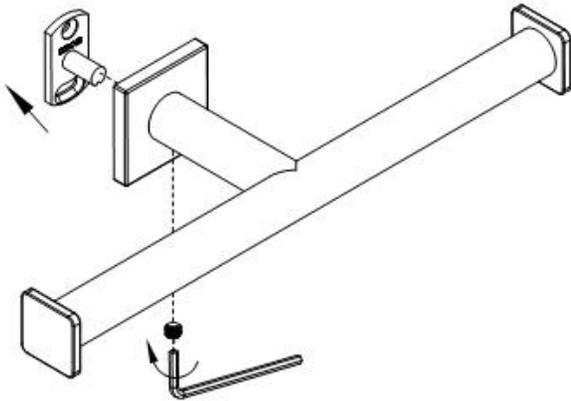

② ALIGN MOUNTING BRACKET AND MARK LOCATION

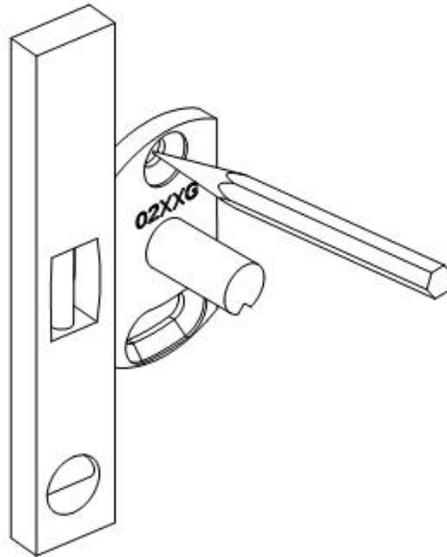



③ DRY WALL INSTALLATION

DO NOT DRILL




④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

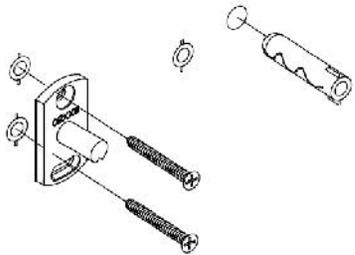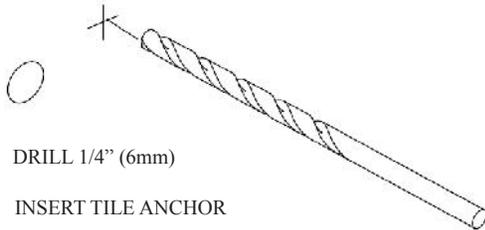

⑤ INSTALL PRODUCT ONTO BRACKET

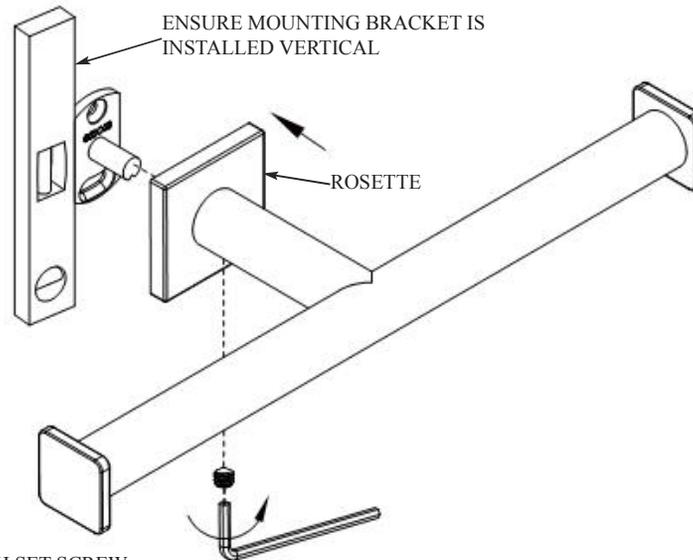

SECURE WITH SET SCREW